

This pattern is to scale. Printer setting should be "Actual size" / 100%.

PLACE ON FOLD

## BEGINNER BOWL COZY

### TOP & BOTTOM FABRIC

- Cut 2 pieces from fabric for top & bottom

Fabric, batting, & thread must be 100% cotton  
to make your bowl cozy microwave safe.

*www.gatheredseams.com*

1"

*Check scale  
before cutting*

If your printer allows, choose "Boarderless printing" so the pattern's lines print right to the edge of the paper.

If your printer doesn't have that option, you'll have a white space along the edge of your paper, but cut your pattern piece as though the cut-line goes right to the edge.

PLACE ON FOLD

## BEGINNER BOWL COZY BATTING

- Cut 1 or 2 pieces from batting

**PR** Batting, fabric, & thread must be 100% cotton to be microwave safe.

*www.gatheredseams.com*